

Are you building in a Flood Zone?


If so, the following are required:

I. ELEVATION CERTIFICATES:

- 1) 2 Required (One *Before* and One *After* Construction)
- 2) All blanks must be filled in (N/A is acceptable in certain instances)

II. DESIGN:

- 1) Correct first finished Floor Elevation (FFE)
- 2) Interior portion of enclosed areas containing space below BFE shall be vented and shall not be partitioned or finished into separate rooms.
- 3) Flood-compliant, watertight materials and construction techniques must be utilized in enclosed spaces containing areas that are below BFE and must be properly vented
 - Area of required vent space is calculated from the footprint of the structure. There must be a total of 1 sq. in. of vent opening for every 1 sq. ft. of enclose area. Engineered vents may be an alternative.
 - ✓ *i.e. if 1900 sq. ft. footprint, then 1900 sq. in. of vents required*
 - Height – Bottom of vent not more than 12 in. above ground

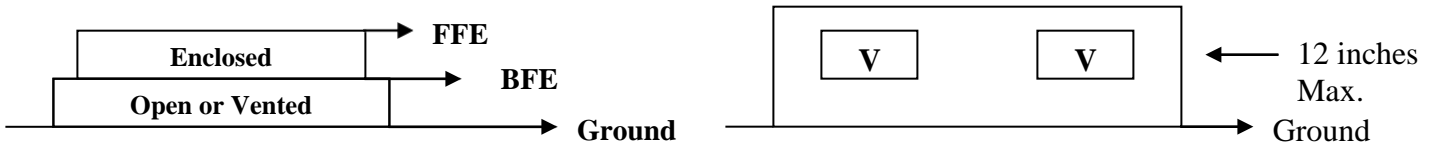

FFE – 2 (two) ft. above BFE
OR

FFE – No less than 3 ft. above highest
adj. grade in areas with no BFE*
*must be calculated

- A. Only the portion at or below BFE will count
- B. Actual vent area (sq. in. of footprint in sq. ft. minus grids) = Net Openings.

III. INSPECTION: An inspection of the vents and construction materials is required. Floodplain compliance will be inspected when Foundation or Open Floor Inspection is requested and **before ANY Certificate of Occupancy is issued.**

IV. FOR MORE INFORMATION CONTACT:

Helen M. Roodman, Zoning Administrator
Sumter City-County Planning Department
12 W. Liberty St., Sumter, SC 29150
(803) 774-1636
hroodman@sumtersc.gov